
Dilution SOLUTIONS


PKX MA/A Quick Start Guide

Flow Rate 1.32 GPH, Max. Pressure 72 PSI

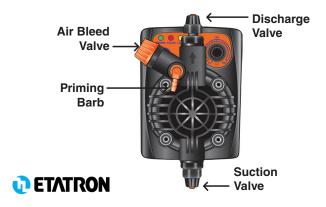

Included in the Box

- PKX MA/A Pump
- Bracket mounting kit for wall or foot mount
- Operating instructions and maintenance manual
- Reducer fitting 1/2" MPT to 3/8" FPT
- Allen Wrench (to remove pump head when needed)
- - Opaque, rigid PE tubing for the discharge
 - Clear, flexible, PVC suction tube
 - Injection valve
 - Foot filter

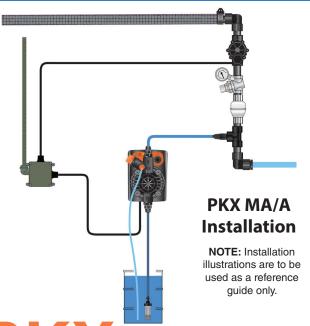

Part A: Attaching the discharge tubing on the top valve of the solenoid head

Unscrew the top discharge valve nut and remove the red protective cap.



Insert the rigid opaque tubing through the nut.



Install the hose onto the discharge barb making sure the hose is seated up to the threads.




Hand tighten the discharge valve nut.



Remove the nut off of the injection stem and set aside.



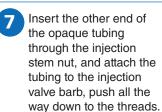



Insert the injection stem into the water line as shown below. Use Teflon tape on both threaded connections.



Hand tighten the nut onto the top of the injection stem.



(See back for Part B and C)



Part B: Attaching the suction valve tubing

1 Cut the clear PVC flexible tubing into two pieces the correct size for your application.



Unscrew the suction valve nut and remove the red protective cap.



Insert the tubing through the nut.



Install the suction tube onto the barb, push all the way to the threads.



Then hand tighten the suction valve nut.



Attach the foot filter to the other end of the tubing using the same process and place vertically in the stock solution.



Attach the second piece of the clear PVC flexible tubing to the orange barb. Place the other end of tubing into stock solution.



Part C: Putting the pump into operation

To begin, set frequency adjusting knob to 100%.



Plug in the pump and press the power switch under the pump, to on (-).



POWER light should turn on when application activated. PULSE light flashes red when pump is feeding chemical.



Open the air bleed valve nut, when solution is visible in the priming tube re-tighten the nut.



Adjust the percentage knob to the desired level.



A CAUTION

See operating manual for complete instructions and safety standards.

When connecting a metering pump either to a public water supply or to its own water source, you must respect the regulations in force concerning protection of the source i.e. backflow prevention, etc.

NOTE: Remove safety labels before installing and remember that pumps may hold water inside.

NEED HELP? Call 1-800-451-6628

