

Mini Maintenance Kit

Part #: **PJDI122MINI-H**



► **D14MZ10**
14 GPM

GENUINE
DOSATRON
PARTS

1-800-523-8499
www.dosatron.com



Vea el reverso para
instrucciones en Español.

Kit Contents:

JDI123:
Plunger seal



PDI756:
Top Guide



PDI752:
Check Valve
Cone



JDI131:
Check Valve
Cone O-Ring



MDI359: Check
Valve Spring



DOSA-LUBE:
Silicone



Use Dosa-Lube on
specified parts only.


CAUTION: Parts may contain concentrated chemicals. The use of Proper Protective Equipment is recommended when performing maintenance.

! To remove seal easily without tools,
squeeze it on either side to raise the seal,
then slide it over the groove. Using sharp
tools could damage the plunger.


Instructions

(Parts included in kit noted in blue)


- Unscrew hose nut (PDI748) and remove the hose. Unscrew injection stem assembly nut (PDI702) and pull stem (CDDI076) down to detach from the unit.

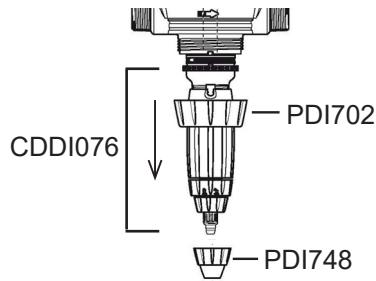

- From the tip of the exposed plunger, remove the plunger seal (JDI123). Pinch the seal, roll it off, then replace with the new one.

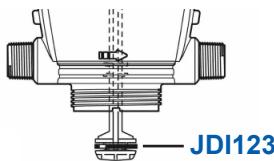


- Hold the injection stem assembly and unscrew the check valve nut (PDI747). Pull out the check valve assembly (PJDI118).

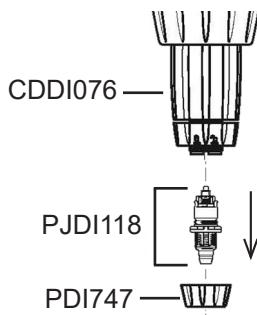


- Give the top guide (PDI756) 1/4 of a turn counter clockwise to remove, and discard.


Discard the check valve spring (MDI359), check valve cone (PDI752) and check valve cone o-ring (JDI131).




- Install the new check valve cone o-ring (JDI131) and spring (MDI359) onto the check valve cone (PDI752) as shown, then insert on the check valve barb with the cone part going down. Place the new top guide (PDI756) on top of the cone and push down turning 1/4 clockwise to lock.

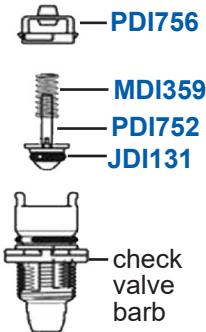

- Apply Dosa-Lube on the check valve barb o-ring. Insert the updated check valve assembly (PJDI118) back into the bottom of the injection stem assembly (CDDI076), making sure the 4 keys on the check valve seat next to the 4 keys on the bottom of the stem. Screw the check valve nut (PDI747) back on.

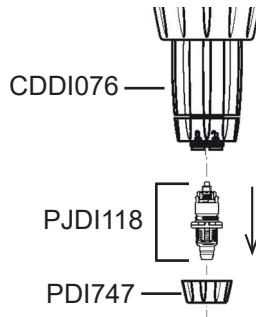

- Rub a small amount of Dosa-Lube onto the injection sleeve o-ring (JDI100), and attach the injection stem assembly back onto the blue body. Screw nut (PDI702) back on.

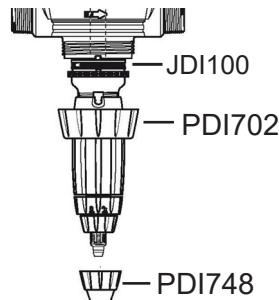

Cut 1" from the tip of the hose in a straight line. Insert the hose back onto the bottom of the check valve barb. Screw hose nut (PDI748) back on.



An Ingersoll Rand Business

Mini Kit de Mantenimiento

Parte #: PJDI122MINI-H



D14MZ10
14 GPM

GENUINE
DOSATRON
PARTS

1-800-523-8499
www.dosatron.com



See the back for
English instructions

Contenido del Kit:

JDI123:
Sello del Émbolo



PDI756:
Guía Superior



PDI752:
Cono de la
Válvula Cheque



MDI359: Resorte de
la Válvula Cheque



JDI131:
O-ring del
Cono



DOSA-LUBE:
Silicona



Use Dosa-Lube
únicamente sobre las
partes indicadas.


PRECAUCIÓN: Las partes pueden
contener químicos concentrados. El uso
de Equipo de Protección Adecuado es
recomendado cuando se efectúa el
mantenimiento.

! Para remover el sello fácilmente sin el uso de
herramientas, apriete a ambos lados del sello,
y deslícelo sobre la ranura. El uso de herra-
mientas afiladas podría dañar el embolo.


Instrucciones

(Partes en color azul incluidas en el kit)


- Desatornille la tuerca de la manguera (PDI748) y remueva la manguera. Desatornille la tuerca del montaje de inyección (PDI702) y remueva el montaje (CDDI076) de la unidad.

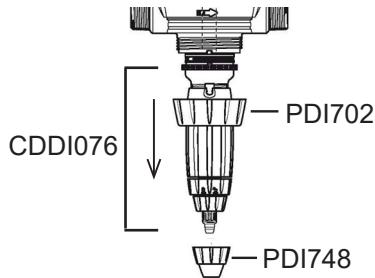

- Desde la punta del émbolo expuesto, pellizque para remover el sello del émbolo (JDI123). Deséchelo y reemplácelo con el sello nuevo.

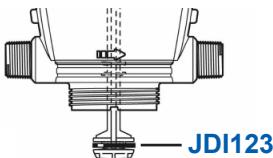

- Sujete el montaje de inyección y desatornille la tuerca de la válvula cheque (PDI734). Remueva la válvula cheque (PJDI115) jalándola hacia abajo.

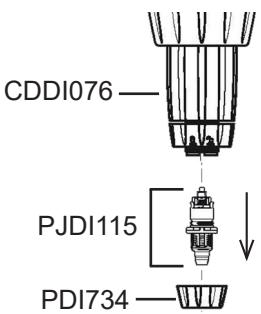


- Gire la guía superior (PDI756) 1/4 de vuelta en contra de las agujas del reloj, y deséchela.

Deséche el
resorte (MDI359),
el cono (PDI752)
y el o-ring del
cono (JDI131).




- Instale el nuevo o-ring (JDI131) y resorte (MDI359) en el cono (PDI752), ver imagen. Inserte el cono, punta hacia abajo, en la lengüeta de la válvula cheque.


Coloque la nueva
quía superior
(PDI756) sobre
el cono, mientras
empuja y gira 1/4
de vuelta en
dirección de las
agujas del
reloj para
asegurarla.

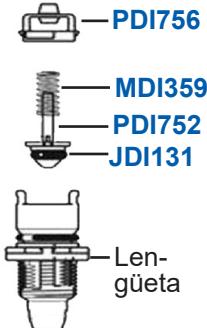

- Aplique Dosa-Lube sobre el o-ring de la válvula cheque. Inserte la válvula cheque (PJDI118) en la parte inferior del montaje de inyección (CDDI076). Asegúrese de que los 4 dientes en la válvula, se sienten al lado de los 4 dientes en el montaje de inyección. Coloque de nuevo la tuerca de la válvula cheque (PDI747).

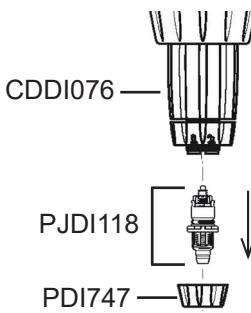

- Aplique Dosa-Lube sobre el o-ring (JDI100) de la manga de inyección, y sujetelo el montaje de inyección al cuerpo azul de la unidad atornillando la tuerca (PDI702).

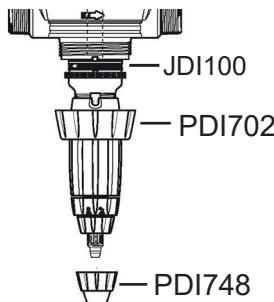

Corte 1 pulgada en línea recta, de
la punta de la manguera de succión.
Sujete la manguera a la lengüeta y
atornille la tuerca de la manguera de
succión (PDI748).