

# ASSEMBLY INSTRUCTIONS

## Li'l Bud-D 5-Gallon DosaCart

**5-Gallon Cart, Bucket, Lid - Part #: HS15-5  
Fits 7 GPM, 11 GPM, and 14 GPM**


(Dosatron Unit, Quick Hook-Up Kit and Cart Sold Separately)



# Customer Service and Technical Support

## 1 - 8 0 0 - 5 2 3 - 8 4 9 9

- 1** Install mounting bracket (provided with your Dosatron pump) to the Li'l Bud-D cart using the hardware kit provided.

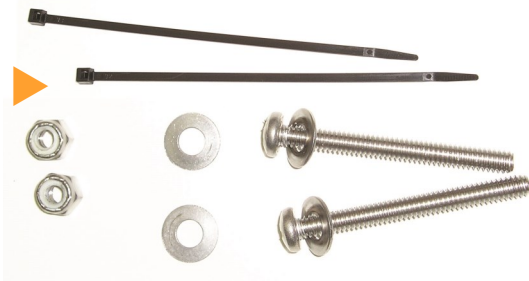

- 2** Assemble Quick Hook-Up Kit with unit (see *Quick Hook-Up Kit instructions that came with kit*).

**NOTE:** Be cautious not to use excessive force when attaching fittings onto blue housing of unit.

- 3** Attach Dosatron unit and Quick Hook-Up Kit onto unit bracket. Secure with unit strap.

- 4** Use supplied zip ties to attach hoses to eye hooks.



5

Insert hose through  
lid of bucket.

Remove hose nut.

Insert hose through nut and  
attach to bottom end of unit barb.



6

Tighten hose nut onto  
bottom of the unit.



**DOSATRON®**


WATER POWERED DOSING TECHNOLOGY

2090 Sunnydale Blvd. • Clearwater, FL 33765 • 727-443-5404  
800-523-8499 • [www.dosatronusa.com](http://www.dosatronusa.com)

# Customer Service and Technical Support

## 1 - 8 0 0 - 5 2 3 - 8 4 9 9

- 1** Install mounting bracket (provided with your Dosatron pump) to the Li'l Bud-D cart using the hardware kit provided.

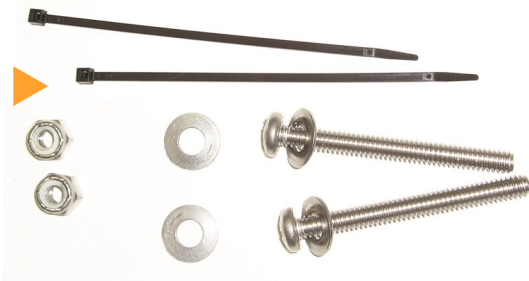

- 2** Assemble Quick Hook-Up Kit with unit (see *Quick Hook-Up Kit instructions that came with kit*).

**NOTE:** Be cautious not to use excessive force when attaching fittings onto blue housing of unit.

- 3** Attach Dosatron unit and Quick Hook-Up Kit onto unit bracket. Secure with unit strap.

- 4** Use supplied zip ties to attach hoses to eye hooks.

