




DOSATRON®

An Ingersoll Rand Business

SYRINGE KIT

Part #: 07944-KIT

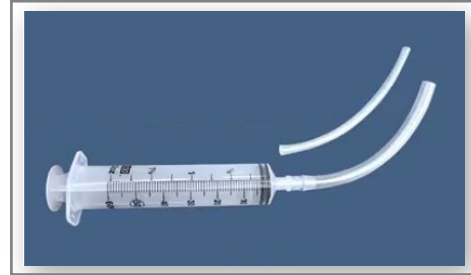

Syringe Kit Instructions For Removing Air Lock

Proper Protection Equipment (PPE), such as gloves, eyewear, and aprons, are recommended when handling a pump. If safety is a concern with the handling of chemicals, water can be used for this process.

1


Locate the Air Bleed Valve on the upper left portion of the Pump Head and open it by turning the valve counter-clockwise.



2


Remove the Bleed-off Tubing from the Air Bleed Barb and set it outside of the chemical bucket.

Be careful of any chemical splash.

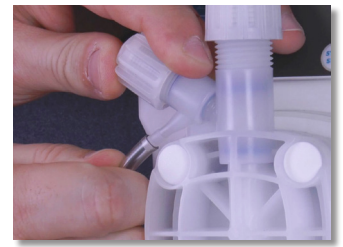

3

Using the Syringe Kit, slide the 4mm adapter of the Syringe onto the Air Bleed Barb and draw the plunger back. Chemistry should enter the Syringe.

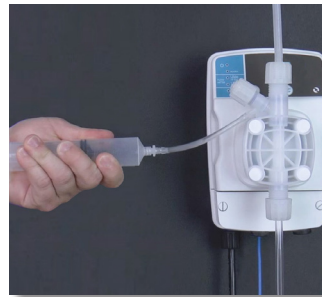


4

Eject the chemistry from the Syringe into the chemical bucket.



5

Slide the Bleed-off Tubing back onto the Air Bleed Barb and place the tubing back into the chemical bucket.

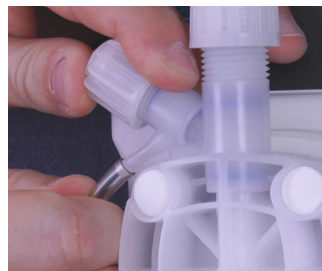

6

Close the Air Bleed Valve by turning it clockwise.

Now, perform the priming process for your specific pump model.

